


# LCD – Remote for Tektronix TDS Oscilloscopes Display Adjustments

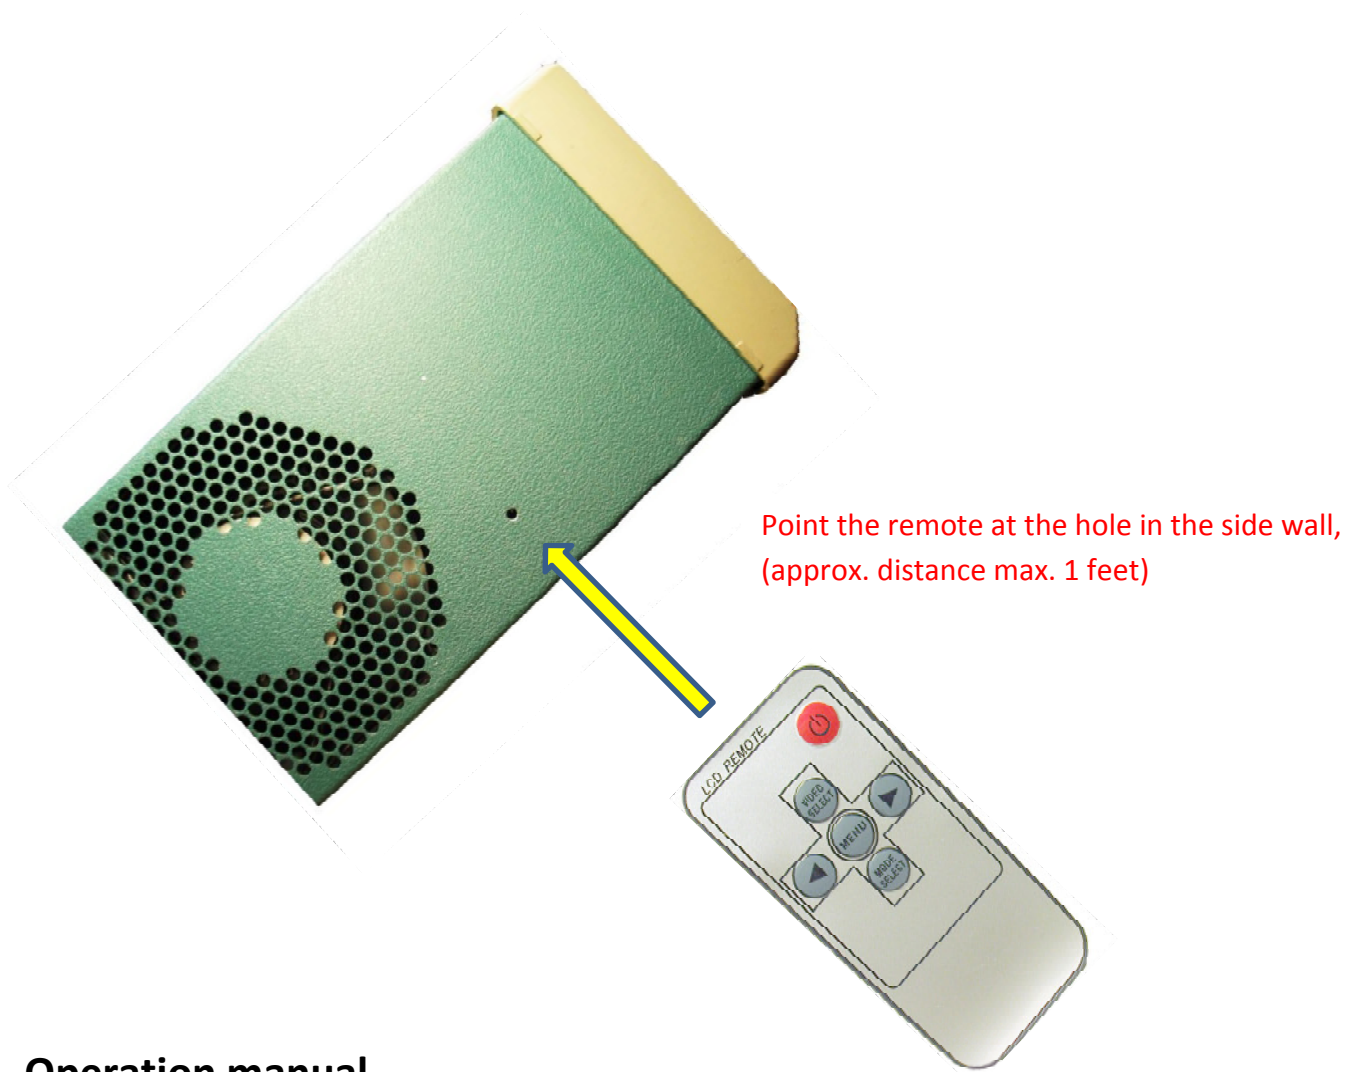

## Operation manual :

If necessary with this Remote you are able to change the values of the LCD-Display, e.g. the brightness or the position of the picture. For further functions please see the MENU.

### Very important:

Please do not change the **VIDEO SELECT** from „VGA“ to one of the other Input " AV1" or "AV2" !  
In a wrong position you will loose the Display (no picture)

### Navigation:

- |   |  |
|---|--|
| <b>MENU / ► :</b>                         | Color / Adjust / OSD / Function / Exit |
| <b>MENU / MENU / ► or ◀ :</b>             | Select of a function                   |
| <b>MENU / MENU / ► / MENU / ► or ◀ :</b>  | Change values                          |
| <b>MODE SELECT ( 1 , 2 or 3 times ) :</b> | Exit                                   |
| <b>Red button (ON/OFF) :</b>              | Display ON or OFF                      |