
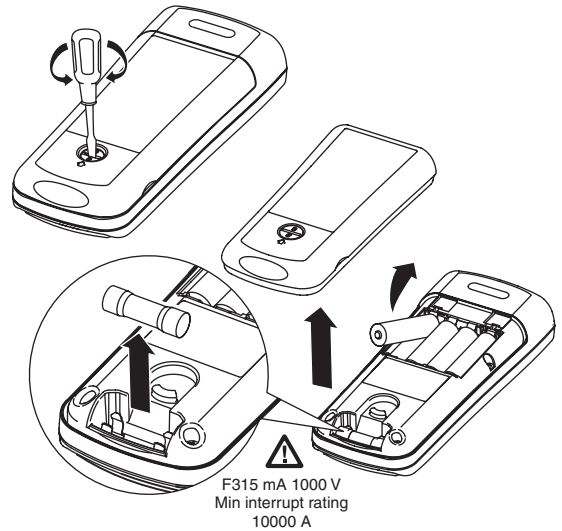



1507/1503 Insulation Tester Quick Reference Guide

 See Users Manual for "Safety Information" and complete operating information.


Fuse Test

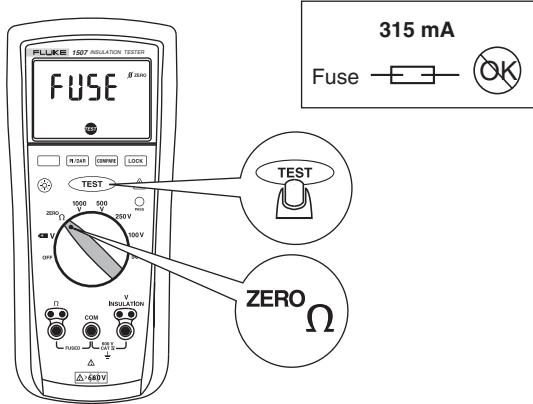


Battery Test

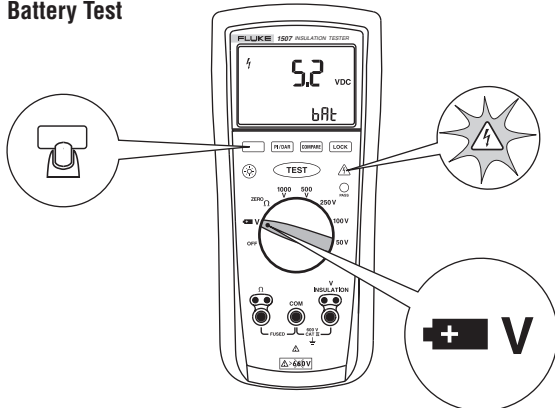


Voltage

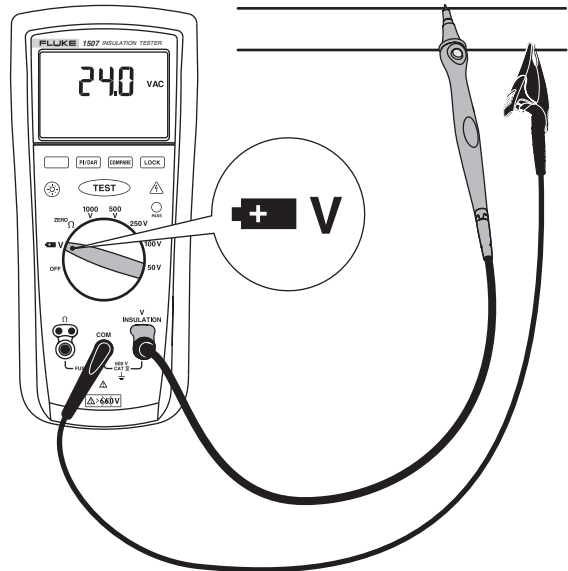


Measuring Insulation Resistance

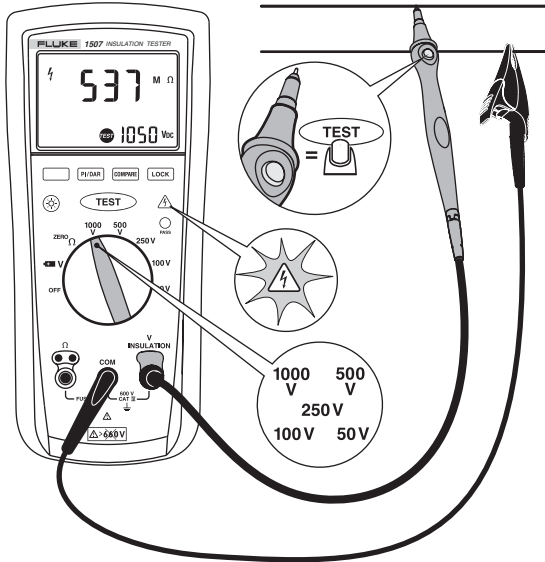

Compare Function (1507)

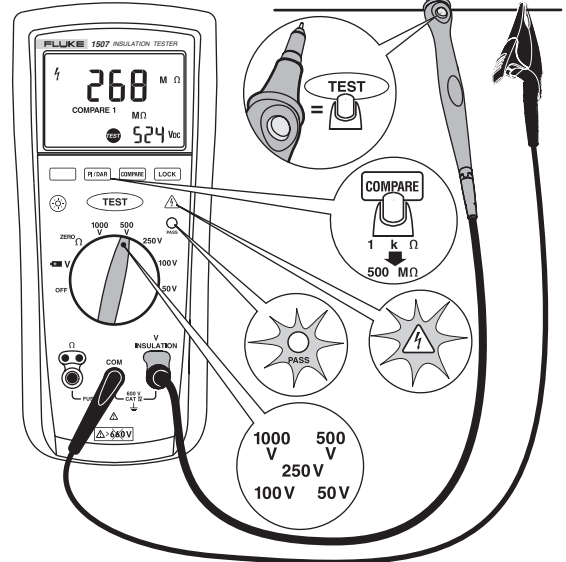

Polarization Index and Dielectric Absorption Ratio (1507)

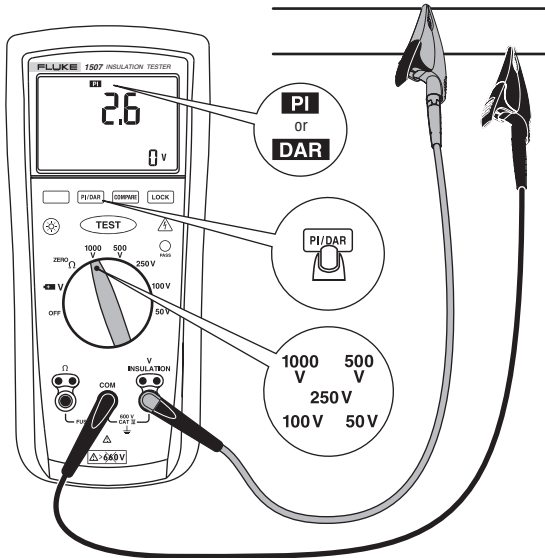

Measuring Earth-Bond Resistance

