

ACCESSORIES

REPLACEMENT PARTS

MICROPHONE MODEL NO.	Desk Stand ①	Swivel Adapter	Disconnect Adapter ②	Lavalier	Wind Screen	Carrying Case	Cable	Cartridge	Case Assembly	Connector Assembly	Cable Connector ③	Impedance Switch	Hang Up Mounting Bracket ④	Plug Element	Pre-Amplifier	Screen Grille Assembly	On-Off Switch Assembly	Switch Button	Transformer	MICROPHONE MODEL NO.	
51 51S 51SC 55S 55S Gold	S37A S37A S37A S37A S37A		A47 A47 A47 A47 A47			— — — AC55 AC55	C55 C55 C55P C55 90C1035	R51 R51 R51 R55 R55	— — — RK37C —	— — — RK30CA —	RK116P RK116P RK116P RK116P RK116P	— — — RK34IS —		— — — RK31P⑦ RK31P⑦			— — — — —	— — — RK35T RK35T	— — — — —	51 51S 51SC 55S 55S Gold	
55SW 55SWC 55SW Gold 104A 104B	S37A S37A S37A — —		A47 A47 A47 — —			AC55 AC55 AC55 — —	C55 C55P 90C1035 C15C C15C	R55 R55 R55 R10 R10	RK37C RK37C — RK1C RK1C	RK33CA† RK33CA† — — —	RK116P RK116P RK116P — —	RK34IS RK34IS — — —	— — — RK6MB RK6MB	— — — — —			RK32S RK32S — RK8S RK9S	— — — RK35B⑤ RK35B⑤	RK35T RK35T RK35T — —	55SW 55SWC 55SW Gold 104A 104B	
201 202 245 245G 245S	— — S38B S38B S38B	— — A25B* A25B* A25B*	— — A45 A45 A45				C20C C20C C58 C58 C58	R3 R3 R2 R2 R2	— — — — —	— — — — —	— — RK114P RK114P RK114P		— — — — —				— — — — —	— — — — —	201 202 245 245G 245S		
245SC 275S 300 315 315S	S38B S38B S33B S37A S37A	A25B* — — — —	A45 — A45 A47 A47	— A27L — — —			C58P — C50 C55 C55	R2 99A405 R30 R31 R31	— — RK71C RK72C RK72C	— — RK68CA RK30CA RK33CA†	RK114P — RK120P RK116P RK116P		— — — — —				— — RK70S — RK75S	— — — — —	⑧	245SC 275S 300 315 315S	
330 401A 401B 404B 404C	S33B — — — —		A45 — — — —				C65 C20C C21C C14C C12C	R32 R5F R5E R5E R5F	— RK29C RK29C RK1C RK2C	— — — — —	RK120P — — — —		— RK6MB RK6MB RK6MB RK6MB				— RK28H RK28H RK7S RK7S	— — RK35B⑤ RK35B⑤	RK107T — — — —	330 401A 401B 404B 404C	
405K 405T 414A 414B 414C							C11C C15C C24C C25C C26C	R5D R5B R14A R14B R14C	RK2C RK1C RK12C RK13C RK13C						— RK5A — — —		RK8S RK9S RK14S RK15S RK15S	RK35B⑤ RK35B⑤ RK16SB⑥ RK16SB⑥ RK16SB⑥		405K 405T 414A 414B 414C	
415 418A 419A 419B 420	S38B — — — —	A25B* — — — —	A45 — — — —	A34L — — — A34L*			C66 C27C C24C C25C C67	R4M R5C R19A R19B R4M	— RK1C RK19C RK20C —				— RK6MB RK6MB RK6MB —				— RK8S RK14S RK15S —	— RK38SB⑤ RK16SB⑥ RK16SB⑥ —		415 418A 419A 419B 420	
425 425-G6 425-G12 425-G18 430	— — — — S33B	A25B* A25B A25B A25B A25B*	— — — — A45	— — — — A34L			90B567 — — — C57	R4A R4A R4A R4A R4M					— — — — RK115P							425 425-G6 425-G12 425-G18 430	
430SL 440 440SL 444 444T	S38B* S37A — — —	A25B* — — — —	A45 — — — —	A34L — — — —			C57 C55 C55 C68 C69	R4M R5 R5 R5R R44T								RK134G — — — —	RK136S — — — —			430SL 440 440SL 444 444T	
450 488A 488B 488C 488T							C70 C12C C14C C15C C22C	R44D R88A R88B R88B R88T	— RK21C RK22C RK22C RK23C				— RK6MB RK6MB RK6MB RK6MB		— — — RK5A RK11A	RK134G — — — —	RK141S RK7S RK7S RK8S RK24S	RK141S RK35B⑤ RK35B⑤ RK35B⑤ RK35B⑤			450 488A 488B 488C 488T
510C 510S 514B 515SA 515SAC	— — — S33B S33B	— — — A25B* A25B*	— — — A45 A45				C82 C82 — C62 C62P	R5 R5 R50 R15 R15	94A389 94D389 — RK55C† RK55C†				— — RK6MB — —			— — — RK54G RK54G	— — — RK57S RK57S			510C 510S 514B 515SA 515SAC	
515SB 515SBG18 520 520B 520SL	S33B — S37A S37A S37A	A25B* — — — —	A45 — — — —				AC58 — — — —	C63 — — — —	— — — — —							RK54G — — — —	RK57S — — — —			515SB 515SBG18 520 520B 520SL	
520SLB 522 533SA 533SAC 533SAV	S37A — S33B S33B S33B	— — A25B* A25B* A25B*	— — A45 A45 A45	— — A22L A22L —			— — AC56 AC56 AC56	— — C58 C58P C58	— — — — —				— — RK114P RK114P RK114P				RK131G RS33 RS33 RS33	RK141S RK48S RK48S RK48S	— — — — —	RK133T	520SLB 522 533SA 533SAC 533SAV
533SAVC 533SB 533SBC 540 540S	S33B S33B S33B S37A S37A	A25B* A25B* A25B* — —	A45 A45 A45 A47 A47	— A22L A22L — —			AC56 AC56 AC56 — C55 C55	C58P C57 — — R33 R33	RK87C† — RK47C† — — —	— — — — RK63CA RK63CA†	RK114P RK115P RK115P RK116P RK116P		— — — — — —			RS33 RS33 RS33 RK66G RK66G	RK48S RK48S RK48S — — RK64S			533SAVC 533SB 533SBC 540 540S	

AL 377B

*Furnished Accessories
†Includes On-Off Switch

① S39A Vibration-Isolated Stand—Fits All Shure Microphones.
② A45—Aluminum Finish, A45B—Black Finish.
③ On microphone end of cable (see back page for description).
④ Kit contains three.

⑤ Kit contains twelve.
⑥ Kit contains six.
⑦ Kit contains four MC3F and four MC4F.
⑧ Included in Case.

ACCESSORIES

REPLACEMENT PARTS

MICROPHONE MODEL NO.	Desk Stand ①	Swivel Adapter	Disconnect Adapter ②	Lavalier	Wind Screen	Carrying Case	Cable	Cartridge	Case Assembly	Connector Assembly	Cable Connector ③	Impedance Switch	Hang Up Mounting Bracket ④	Plug Element	Pre-Amplifier	Screen Grille Assembly	On-Off Switch Assembly	Switch Button	Transformer	MICROPHONE MODEL NO.
540SC 544 544-G6 544-G12 544-G18	S37A — — — —	— — — — —	A47 — — — —	— — — — —	— A2WS A2WS A2WS A2WS	— — — — —	C55P C86 C86 C86 C86	R50 R45 R45 R45 R45	RK62C — — — —	RK63CA† — — — —	RK116P RK117P RK117P RK117P RK117P	— — — — —	— — — — —	RK31P⑦ — — — —	— — — — —	RK66G — — — —	RK64S — — — —	— — — — —	— — — — —	540SC 544 544-G6 544-G12 544-G18
545 545 Gold 545C 545L 545L Gold	S33B S33B S33B S33B S33B	A25B* A25B A25B A25B A25B	A45 A45 A45 A45 A45	— — — A54L* A54L*	— A2WS A2WS A2WS A2WS	AC54 AC54 AC54 AC54 AC54	C56 90C1034 C56P C71 C71	R45 R45 R45 R45L R45	RK42C — R42C RK88C —	— — — — —	RK117P RK117P RK117P — —	— — — — —	— — — — —	RK31P⑦ RK31P⑦ RK31P⑦ — —	— — — — —	— — — — —	— — — — —	— — — — —	— — — — —	545 545 Gold 545C 545L 545L Gold
545S 545SC 545S Gold 545SD 546	S37A S37A S37A S37A S33B	— — — A25B* —	A47 A47 A47 A45 A47	— — — — —	— A2WS A2WS A2WS A2WS*	AC54S AC54S AC54S AC54 —	C56 C56P 90C1034 C59 C65	R45 R45 R45 R45 R46	RK41C RK41C — — RK77C	RK33CA† RK33CA† — — RK78SM†	RK117P RK117P RK117P RK120P RK120P	— — — — ⑧	— — — — ⑧	RK31P⑦ RK31P⑦ RK31P⑦ — ⑧	— — — — —	— — — — —	RK32S RK32S — — RK76S	— — — — —	— — — — —	545S 545SC 545S Gold 545SD 546
547 548 548S 548SD 549	S33B S33B S37A S37A S33B	— — A25B* — A25B*	— — A45 — A45	— — — — —	— A2WS — — —	— AC54 AC54S AC54 —	— C59 C59 C59 C59	R46 R48 R48 R48 R48	RK77C RK39C RK41C — —	RK78SM† — RK53CA† — —	RK120P RK120P RK120P RK120P RK120P	— — — — —	— — — — —	⑧ RK40P④ RK40P④ — RK40P④	— — — — —	— — — — —	— — — — —	— — — — —	— — — — —	547 548 548S 548SD 549
550S 550SC 556S 560 560C	S37A S37A S33B — —	— — — — —	A47 A47 A45 — —	— — — A34L* A34L*	— — — — —	— — — — —	C55 C55P C65 C73 —	R50 R50 R56 R50 R50	— — — — —	— — — — —	RK116P RK116P RK120P — —	— — — — —	— — — — —	— — — — —	— — — — —	— — — — —	— — — — —	— — — — —	550S 550SC 556S 560 560C	
561 565 565C 565 Gold 565S	— S33B S33B S33B S37A	— — A25B* A25B* A25B*	— — A45 A45 A45 A47	— — — — —	— — — — —	— AC56 AC56 AC56 AC56S	C74 C56 C56P 90C1034 C56	R50 R65 R65 R65 R65	RK86C RK42C RK42C — RK41C	— — — — RK33CA†	— RK117P RK117P RK117P RK117P	— — — — —	— — — — —	— RK31P — — RK31P	— — — — —	— — — 90B1235 RS65	— — — — RK32S	— — — — —	— — — — —	561 565 565C 565 Gold 565S
565SC 565SD 566 570 570S	S37A S37A S33B — —	— A25B* — A57R A57S	A47 A45 A47 — —	— — — A57L* A57L*	— — — — —	— AC56S AC56 — —	C56P C59 C65 C76 C77	R65 R65 R66 R70 R70	RK41C — RK77C — RK90C†	RK33CA† — RK78SM† — —	RK117P RK120P RK120P — —	— — ⑧ — —	— — — — —	RK31P — ⑧ — —	— — — — —	— — — — —	— — — — —	— — — — —	— — — — —	565SC 565SD 566 570 570S
571 572G 574SA 574SB 575S	S33B — S38B S38B S38B	— — — — —	— — — — —	— — A57L A27L A27L*	— — — — —	— — — — —	C76 C86 — — C78	R71 R70 R50 R50 R50	— — — — —	— — — — —	— — — — —	— — — — —	— — — — —	— — — — —	— — — — —	— — — — —	— — — — —	— — — — —	— — — — —	571 572G 574SA 574SB 575S
575SB 575SBC 575SC 576 578	S38B S38B S38B S33B S33B	— — — A57S* A57S*	— — — A45 A45	— — — A57L A57L	— — — A2WS A2WS	— — — AC57 AC57	C79 90A1231 — — C80	R50 R50 R50 — R78	— — — — RK129C†	— — — — —	— — — — —	— — — — —	— — — — —	— — — — —	— — — — —	— — — — —	— — — — —	— — — — —	— — — — —	575SB 575SBC 575SC 576 578
578C 578S 579SB 580SA 580SAC	S33B S33B S33B S33B S33B	A57S* — A57C A25B* A25B*	A45 A47 A45 A45 A45	A57L A57L — — —	A2WS A2WS — — —	AC57 AC57 — AC58 AC58	94G223 C81 C85 C60 C60P	R78 R78 R50 R58 R58	RK129C† RK126C RK163C RK49C† RK49C†	— RK124CA† — — —	— — RK120P — —	— — — — —	— — — — —	— — — — —	— — — — —	— RK127G RK161G RK51G RK51G	— — — — —	— — — — —	— — — — —	578C 578S 579SB 580SA 580SAC
580SA-MP 580SB 581SA 581SB 585SA	S33B S33B S33B S33B S33B	A25B* A25B* A25B A25B A25B*	A45 A45 A45 A45 A45	— — — — —	— — — — —	AC58 AC58 AC58 AC58 AC56	C60P C61 C58 C55 C58	R58 R58 R58 R58 R85	RK49C† RK50C† — RK58C RK60C RK44C†	— — — — — —	— — — — — RK114P	— — — — — —	— — — — — —	— — — — — RK61P⑥	— — — — — —	— — — — — —	— — — — — —	— — — — — —	— — — — — —	580SA-MP 580SB 581SA 581SB 585SA
585SAC 585SA Gold 585SAV 585SAVC 585SB	S33B S33B S33B S33B S33B	A25B* A25B* A25B* A25B* A25B*	A45 A45 A45 A45 A45	— — — — —	— — — — —	AC56 AC56 AC56 AC56 AC56	C58P — C58 C58P C57	R85 R85 R85 R85 R85	RK44C† 90B1245 RK92C† RK92C† RK45C†	— — — — —	RK114P RK114P RK114P RK114P RK115P	— — — — —	— — — — —	— — — — RK52P⑥	— — — — —	— RS85 94D388 RS85 RS85 RS85	— — — — —	— — — — —	— — — — —	585SAC 585SA Gold 585SAV 585SAVC 585SB
585SBC 585SBV 588SA 588SAC 588SB	S33B S33B S33B S33B S33B	A25B* A25B* A25B* A25B* A25B*	A45 A45 A45 A45 A45	— — — — —	— — — — —	AC56 AC56 AC56 AC56 AC56	— C57 C83 C83P C59	R85 R85 R8 R8 R8	RK45C† RK148C RK80C† RK80C† RK83C†	— — — — —	RK115P RK115P RK120P RK120P RK120P	— — — — —	— — — — —	RK52P⑥ RK52P⑥ ⑧ ⑧ ⑧	— — — — —	— RS85 RK82G RK82G RK82G	— — — — —	— — — — —	— — — — —	585SBC 585SBV 588SA 588SAC 588SB
707A 710A 710S 715 777	S37A — — — S38B	— — — — A25B	— — — — A45	— — — — A22L*	— — — — —	— — — — —	— C82 C82 — C58	R7 R9 R9 — R77	— — — — —	— — — — —	— — — — —	— — — — —	— — — — —	— — — — —	— — — — —	— — — — —	— — — — —	— — — — —	— — — — —	707A 710A 710A 715 777
777A 777S 777SA	S38B S38B S38B	A25B A25B A25B	A45 A45 A45	A22L* A22L* A22L*	— — —	— — —	C58 C58 C58	R77 R77 R77	— — —	— — —	— — —	— — —	— — —	— — —	— — —	— — —	— — —	— — —	— — —	777A 777S 777SA

REPLACEMENT CARTRIDGES AND CABLES
FOR OTHER MICROPHONES

Microphone Model No.	Cartridge	Cable	Microphone Model No.	Cartridge	Cable	Microphone Model No.	Cartridge	Cable
11MC1	R5E	—	CB15F	R10	C18C	CR1G	R4M	
12MC1	R10	—	CB20	99A149A	—	CR2	R4M	
55	—	C55	CB21	99A149A	—	CR2B	R4M	
55A	—	C55	CB26	—	C15C	CR2C	R4M	
55B	—	C55	CB50	99A149A	C16C	CR2D	R4M	
55C	—	C55	CB50A	99A149A		CR2E	R4M	
101A	—	C15C	CM1C	R5D		CR2F	R4M	
101B	—	C15C	CM4A	R5E		CR2G	R4M	
101C	R10	C15C	CM4B	R5E		CR2H	R4M	
101E	R10	C16C	CM4C	R5F		CR3A	R4M	
102A	—	C15C	CM4D	R5E		CR3B	R4M	
102B	—	C15C	CM4E	R5E		CR3C	R4M	
102C	R10	C15C	CM4F	R5E		CR3D	R4M	
102E	R10	—	CM4G	R5E		CR3E	R4M	
103	R10	C18C	CM4H	R5F		CR3SLA	R4M	
115	94A149A	—	CM4K	R5D		CR4A	R5D	
245GS	R2	—	CM4KB	R5E		CR4AB	R5E	
275SK	—	C23C	CM4L	R5C		CR4AC	R5E	
405B	R5E	—	CM4N	R5F		CR4B	R5E	
405C	R5F	—	CM4P	R5E		CR4C	R5F	
405KB	R5E	C11C	CM4Q	R5E		CR4D	R5E	
410	R5	—	CM4T	R5E		CR4E	R5E	
410S	R5	—	CM4TA	R5E		CR4F	R5D	
430F	—	C57	CM4U	R5D		CR4G	R5E	
505B	R5B	—	CM4V	R5E		CR4H	R5E	
505C	R5	—	CM4W	R5F		CR4K	R5D	
505K	R5	C10C	CM4Y	R5C		CR4L	R5D	
505KB	R5B	C10C	CM8A	R14A		CR4LA	R5D	
505T	R5B	—	CM8B	R5C		CR4M	R5E	
510MD	R5	—	CM8C	R14B		CR4N	R5E	
510SLB	R5B	—	CM8D	R14B		CR4P	R5D	
533SF	—	C57	CM9A	R5D		CR4Q	R5E	
535	—	C55	CM9BT	R5C		CR4R	R5E	
545F	—	C55	CM9C	R5D		CR4S	R5E	
545SF	—	C55	CM9D	R5E		CR4SP	R5E	
550S Gold	R50	C55	CM9E	R5E		CR4T	R5E	
580SA Gold	R58	—	CM9F	R5C		CR4U	R5D	
581SF	—	C55	CM9G	R5C		CR4V	R5E	
708A	R7	—	CM9H	R5E		CR4W	R5E	
C3201TA	R5E	—	CM9J	R5E		CR4Y	R5E	
CB3C			CM9L	R5E		CR4Z	R5E	
CB4AC			CM9N	R5C		CR5	R5B	
CB4V			CM9P	R5F		CR5A	R5B	
CB6C			CM9R	R5E		CR5B	R5	
CB8A			CM9S	R5E		CR5C	R5B	
CB8B			CM9T	R5E		CR5D	R5	
CB8C			CM14A	R14A		CR5E	R5B	
CB8D			CM14B	R14B		CR5F	R5B	
CB8E			CM14C	R14B		CR5G	R5B	
CB9B			CM14D	R14B		CR5H	R5	
CB9D			CM14E	R14A		CR5K	R5	
CB9G			CM14F	R14B		CR5L	R5	
CB9L			CM14G	R14B		CR5M	R5C	
CB9P			CM16A	R88A		CR5N	R5B	
CB9S			CM16B	R88B		CR5P	R5B	
CB9T	—	—	CM16C	R88B		CR5S	R5B	
CB9U	—	—	CM16E	R88A		CR5T	R5B	
CB9V	—	—	CM16G	R88A		CR6	R5	
CB10	R10	C15C	CM16H	R88B		CR6A	R5	
CB10B	R10	C15C	CM16T	R88B		CR7	R5	
CB10D	R10	C15C	CM16TA	R88B		CR8	R5	
CB10E	R10	C16C	CM16TF	R88T		CR10B	R5	
CB10F	R10	C15C	CM16TG	R88T		CR10C	R5	
CB12	R10	C15C	CM17B	R5E		CR10D	R5	
CB12A	R10	C15C	CM17C	R5E		CR10E	R5	
CB12C	R10	C15C	CM17E	R5E		CR10F	R5C	
CB12D	R10	C15C	CM19A	R19A		CR10G	R5	
CB12E	R10	C17C	CM44D	R5E		CR10H	R5C	
CB12M	R10	C15C	CM44E	R5E		CR11AR	R5	
CB12T	R10	C17C	CM44F	R5E		CR11SLB	R5B	
CB12W	R10	C15C	CR1A	R4M		CR20A	R5	
CB15	R10	C15C	CR1B	R4M		CR20B	R5	
CB15B	R10	C15C	CR1C	R4M		CR20C	R5	
CB15C	R10	C15C	CR1D	R4M		CR20D	R5B	
CB15D	R10	C15C	CR1E	R4M		CR20E	R5	

REPLACEMENT CARTRIDGES AND CABLES
FOR OTHER MICROPHONES—Continued

Microphone Model No.	Cartridge	Cable	Microphone Model No.	Cartridge	Cable	Microphone Model No.	Cartridge	Cable
CR20H	R5		CR81C	R5		EM25A	R5D	C11C
CR20K	R5B		CR81D	R5		EM25C	R5D	—
CR20SL	R5		CR81E	R5		EM25E	R5D	C11C
CR20SLA	R5B		CR81F	R5		EM26A	R5D	—
CR20SLB	R5B		CR82	R5		EM28A	R5D	—
CR20SLC	R5B		CR83	R5		EM28B	R5D	
CR20SLD	R5B		CR85	R5		EM30A	R88A	
CR20SLE	R5B		CR85A	R5		EM33A	R14A	
CR20SLG	R5B		CR85B	R5		EM33B	R14A	
CR20SLT	R5B		DY40E	R50		EM33C	R19A	
CR20SM	R5		DY40SLA	R50		EM33D	R14A	
CR20U	R5		DY75A	R50		EM34A	R5D	
CR20UA	R5		DY88A	R50		MAC565	R50	
CR20UB	R5		DY88AH	R50		MI11030	R50	
CR20UC	R5		DY88B	R50		MI11031	R50	
CR21SL	R5		DY88BH	R50		MI38002	R50	
CR40A	R5		DY88C	R50		MI38019	R50	
CR42	R5		DY88D	R50		MI38020	R50	
CR80	R5		DY88E	R50		MI38021	R50	
CR80A	R5		DY88F	R50		MI38263	R50	
CR80B	R5		DY88H	R50		MK0000	R5E	—
CR80C	R5		DY88K	R50		MK0004	R5E	—
CR80D	R5		DY88L	R50		MS12	—	C17C
CR80E	R5		DY88M	R50		RU120	R5B	—
CR80F	R5		EM8A	R5		SB44	R5F	—
CR80G	R5		EM8B	R5	—	SMNL-01	R19B	
CR80J	R5		EM10A	R5	C10C	TH10	99A149A	
CR80K	R5		EM10A2	R5D	C11C	TH12	R5D	
CR80L	R5		EM10B2	R5D	C11C	TH41A	R5E	
CR80M	R5B		EM10C	R5D	—	TH41B	R5D	
CR80N	R5		EM12B	R5E	—	TH41C	R19B	
CR80P	R5		EM12C	R5D	—	TH41D	R5E	
CR80Q	R5B		EM15A	R5E	—	TH41E	R5E	
CR80R	R5		EM16A	99A149A	—	TH41F	R19B	
CR80S	R5B		EM18A	R5C	C28C	TH41G	R5D	
CR80T	R5		EM18B	R5C	C28C	TH100	R5D	—
CR80V	R5B		EM18C	R5C	C28C	TU341	—	C15C
CR80Z	R5		EM18D	R5C	C27C	TU342	—	C15C
CR81	R5		EM19A	R5C	—	TU352	—	C15C
CR81A	R5		EM19B	R5C	—			

CABLE CONNECTOR KIT DESCRIPTION		
RK KIT #	CONTENTS	QTY
RK114P	MC1F FEMALE PLUGS	3
RK115P	MC2M MALE PLUGS	2
RK116P	MC3M MALE PLUGS	2
RK117P	MC4M MALE PLUGS	2
RK118P	STANDARD 1/4" MALE PHONE PLUGS	3
RK119P†	XLR-3-13 FEMALE CANNON PLUG	1
RK120P	XLR-3-11C FEMALE CANNON PLUG	1
RK121P	XLR-3-12C MALE CANNON PLUG	1
RK122P†	XLR-3-14 MALE CANNON PLUG	1
RK123P	PHONE PLUG ADAPTER FOR USE ON A95 SERIES TRANSFORMERS	1

†These Plug Kits are wall and panel receptacles and cannot be used on microphones.